

Trend View in INNcontrol 3

Trend View displays historical HVAC, Rental/Occupancy and Guest Requests data for each individual room. To access the Trend View:

1. Type the room number in the “View Room” text box and click “Go”. Or, you may also double-left-click on a room from the navigation pane, 3DM or Quick View screens.




2. Once in the individual Room Status screen, you will see a button called “Trend” in the top menu bar. Click “Trend” to access the Trend View.




3. Click the “Control” menu button on the center left Main Menu Button pane to access the navigational controls for this view.



Room Trend Layout

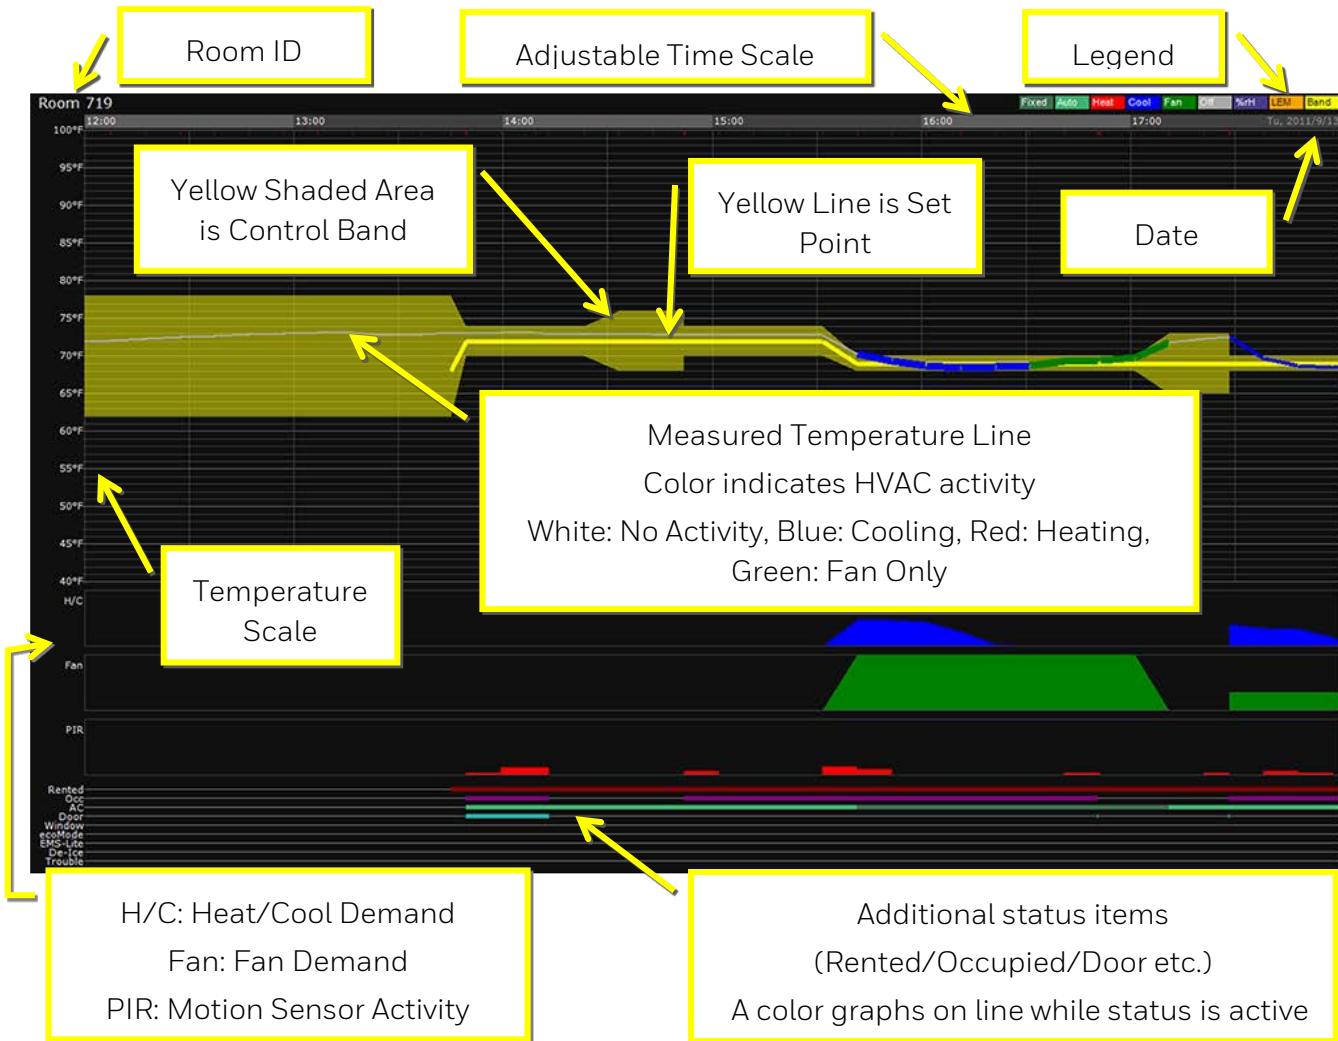

Room Trend Controls

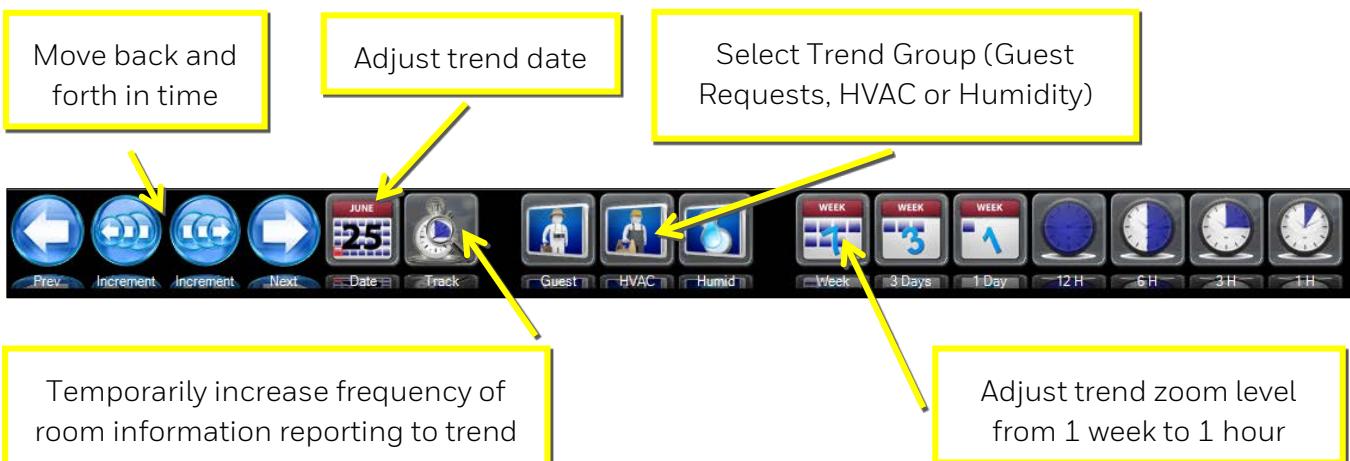

HVAC Alarm Trend Example

